



TECHNICAL INFORMATION

TITLE: SE-330 NEUTRAL-GROUNDING-RESISTOR MONITOR SETTINGS

SE-330 Model Number: SE-330 - -

SE-330 Serial Number: _____ **Revision:** _____

SE-330 Communications: Local RS-232 Other:
Address: _____

Substation Identification: _____

Transformer Specifications: _____

CURRENT TRANSFORMER:
EFCT (5-A primary rating when connected to sensitive input)
SE-CS30 (30-A primary rating when connected to sensitive input)
Other: _____ : _____
Connection:
Sensitive Input (Terminals 8, 11)
1-A Input (Terminals 9, 11)
5-A Input (Terminals 10, 11)

SENSING RESISTOR:
ER-600VC
ER-5KV
ER-15KV
Moisture Resistant Enclosure
ER-25KV
Moisture Resistant Enclosure
ER-35KV
Moisture Resistant Enclosure

NGR RATINGS:
Current: _____ A
Voltage: _____ V
Time: _____
Resistance: _____ Ω
Serial No.: _____
Mfg: _____

REMOTE INDICATION:
RK-332 None
Other _____

GF TRIP LEVEL:
Setting: _____ % _____ A

GF TRIP TIME:
Setting: _____ s


VN TRIP LEVEL:
Setting: _____ V
X 5 for 100 kΩ Sensing Resistor

DATE	REV	AUTHOR	DOCUMENT LOCATION	PAGE
2005-Oct-26	0	DS	http://www.startco.ca/library/techinfo/section3/3.12.pdf	1 of 2



TECHNICAL INFORMATION

TITLE: SE-330 NEUTRAL-GROUNDING-RESISTOR MONITOR SETTINGS

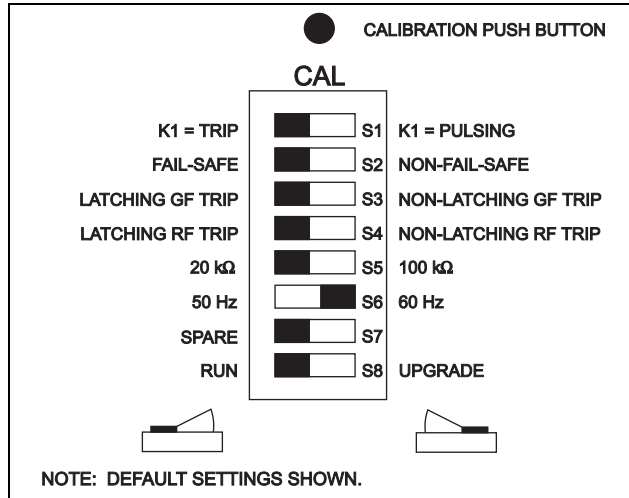

CONFIGURATION SWITCH SETTINGS:

- | | | | |
|----------------------|--------------------------|----------------------|--------------------------|
| S1: K1 = TRIP | <input type="checkbox"/> | K1 = PULSING | <input type="checkbox"/> |
| S2: FAIL-SAFE | <input type="checkbox"/> | NON-FAIL-SAFE | <input type="checkbox"/> |
| S3: LATCHING GF TRIP | <input type="checkbox"/> | NON-LATCHING GF TRIP | <input type="checkbox"/> |
| S4: LATCHING RF TRIP | <input type="checkbox"/> | NON-LATCHING RF TRIP | <input type="checkbox"/> |
| S5: 20 KΩ | <input type="checkbox"/> | 100 KΩ | <input type="checkbox"/> |
| S6: 50 Hz | <input type="checkbox"/> | 60 Hz | <input type="checkbox"/> |
| S7: NOT USED | | | |
| S8: RUN | <input type="checkbox"/> | UPGRADE | <input type="checkbox"/> |

SYSTEM CALIBRATION:

Calibration Successful

Date (YYYY-MM-DD) _____

Calibration Number (if available) _____

DATE	REV	AUTHOR	DOCUMENT LOCATION	PAGE
2005-Oct-26	0	DS	http://www.startco.ca/library/techinfo/section3/3.12.pdf	2 of 2